

# User Manual



## Food Warmer

## User Manual

Models: 7700

08/2011

**Please read and keep these instructions. Indoor use only.**

## Specifications

**Electrical: 120V~, 60Hz; 1200W**

**Capacity: 19 Liter (20 Quart)**



**Read and understand all instructions before using this appliance. CAUTION! HOT SURFACE!**

# User Manual

## Warnings

- This appliance must be placed on a level surface.
- Do not leave this appliance unattended while it is in use.
- Never immerse the appliance in water.
- Do not operate the appliance while it is empty.
- Do not overfill the appliance with water.
- Never move or carry the appliance when it is “ON” or if it is full of hot liquids.
- Do not attempt to repair or replace the power cord if it becomes damaged. Contact a qualified service agent.
- Be careful not to touch any hot surfaces. Make sure the power cord does not come in contact with any hot surfaces.

## Operation

### **Carefully unpack the Food Warmer and inspect it for damage.**

- Add about 4 liters of water to the stainless steel container. Never over-fill with water. Under no circumstances should the food pan float, ever when empty. Remove any excess water immediately.
- Turn the temperature controller on. The indicator light will glow, showing that the unit is on. Adjust the temperature control dial to the correct setting:
  - a: Settings 4-6 are designed for initial warm-up
  - b: Normal control settings range from 1-3
  - c: Once the Food Warmer has reached the desired temperature, adjust the temperature control dial to a lower setting. It is recommended that the lowest possible setting that maintains food serving temperatures be used.

**Note: this Food Warmer is not designed to cook soups or sauces, nor is it designed to re-thermalize cold or frozen products.**

- Always keep the lid attached and closed when not serving.

## Cleaning and Maintenance

### **Regular cleaning will help prolong the Food Warmer’s life.**

- Always unplug the Food Warmer when not in use, when filling, or when cleaning.
- Spilled food should be removed immediately from exterior surfaces, with a damp soapy cloth. Do not use harsh or abrasive chemicals or scouring agents.
- The Food Warmer and lid are dishwasher-safe.
- Never immerse the appliance in water.