

In order to provide the best service, ATOSA

Requests that please register your warranty online

Please do not overload unit!

At www.atosausa.com

For any service issues, please kindly contact us at

Email: warranty@atosausa.com

Or

 
 
Toll Free: 1-800-683-8660

Warm Tips:

Please read the manual carefully before using the product.

Heated Display Case

Installation and Operation Manual

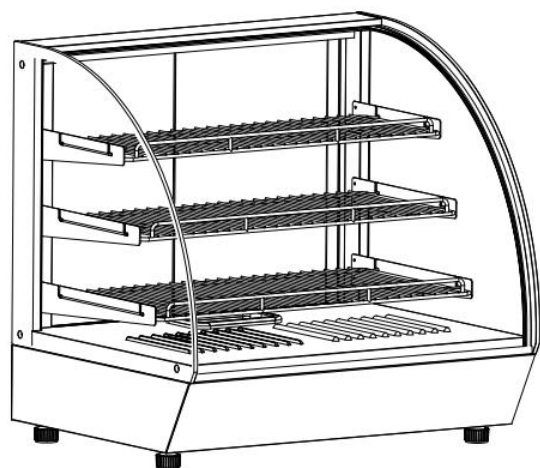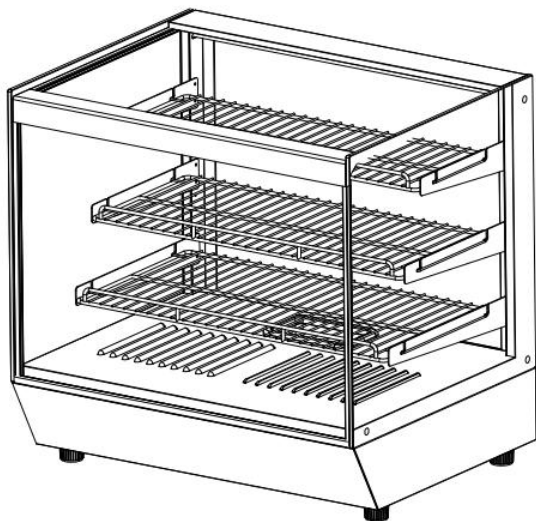

ATOSA

Contents

- Precaution 1
- Structure and Parts 2
- Preparation and Power Supply 3
- Installation and Operation 4
- Cleaning and Maintenance 5
- Major Parameters 6
- Disposal of the product 7
- Warranty Information 8

Precaution

- 1 This instruction manual contains information about the installation, operation and maintenance of the device and should be consulted as an important source of information and reference guide
- 2 Awareness of the safety instructions and instructions for use in this manual will ensure the safe and correct use of the device
- 3 To prevent hazards and to ensure optimum efficiency, no modifications or alterations to the device that are not explicitly approved by the manufacturer may be undertaken.

 
This device may only be operated in technically proper and safe condition.

- 4 The device should be never left unattended during operation. Keep away children.
- 5 Preserve this manual safely. When passing on/selling the device to a third party, the manuals must be handed over along with the device
- 6 Every person using the device must act in accordance to the manuals and under consideration of the safety advice
- 7 The device is to be used indoors only.
- 8 Any technical interventions, as well as assembly and maintenance are to be made by a qualified customer service only
- 9 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

- 10 Children should be supervised to ensure that they do not play with the appliance.
- 11 The operation manual is not suitable for the persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge

Structure and Parts

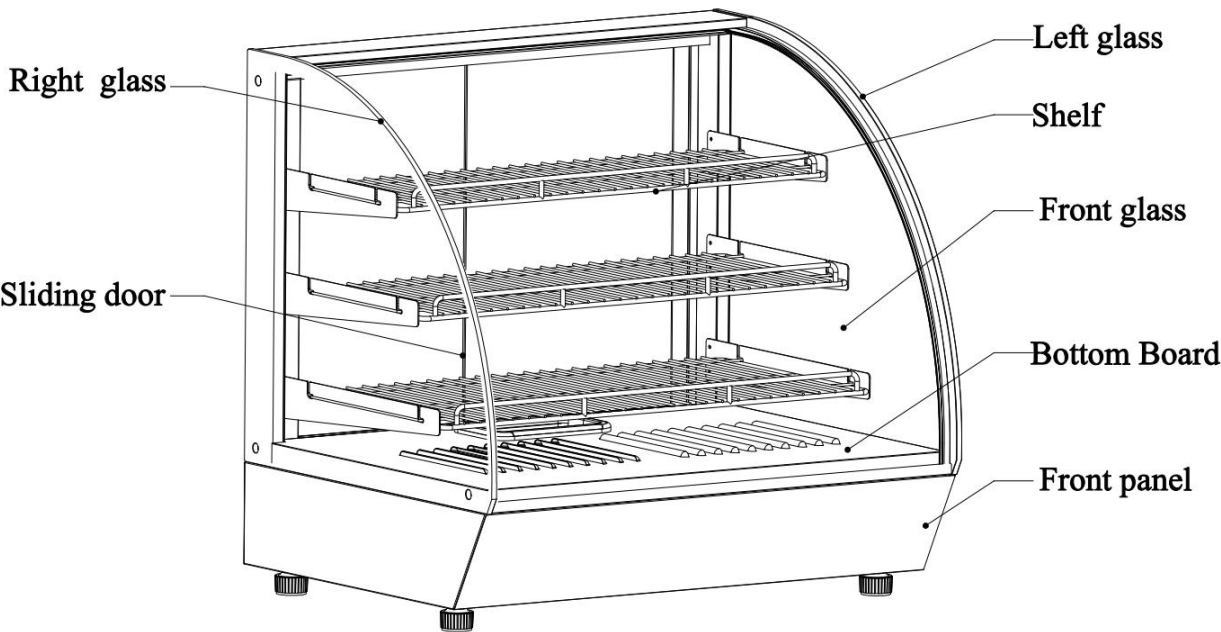

Preparation and Power Supply

Exclusive power socket

The power receptacle must have a reliable earth connection.

No share on socket

Never let the device share the common socket with other appliance, otherwise the cable becomes hot and fire might be resulted.

Protect cables

Never break or damage the cables otherwise current leakage and fire might be resulted.

No water flushing

Never give the device surface a flush otherwise current leakage might be resulted

Prevent from flammables and explosive

Never put any flammable or explosive inside the device such as ether, gasoline, alcohol, adhesive and explosive. Never put dangerous product nearby the device.

Installation and Operation

Installation

- 1 Place the device on top of an even and safe surface which supports the weight of the device and is not heat sensitive
- 2 Not at any time should you place the device on an inflammable surface (such as table cloth, carpet, etc)
- 3 You must not position the device near open fireplaces, electric ovens/arc furnaces/electric heaters or other heat sources.
- 4 Position the device in such a way that the plug is easily accessible.

Operation

- 1 Before first use, clean the inner sides and the playing grids with a soft cloth and a mild cleaning agent.

Afterwards, dry the device thoroughly.

- 2 Remove the water bowl from the device. The water bowl is installed inside the device and then fill the water bowl with water.
- 3 Connect the device to a single grounded power socket.
- 4 Set the temperature as required for respective foods. You may adjust the desired temperature in the range between 85°F-200°F.
- 5 The temperature inside of the hot display can be read from the front display.
- 6 Put the foods in appropriate containers before placing them inside the hot display and shut it by using the sliding door
- 7 Some of the device parts become very hot, always use safety gloves when placing or removing foods.
- 8 The foods are kept warm at the temperature set by you previously
- 9 In order to place or remove foods. You may open the door at rear side
- 10 Switch on the inner light when required using the light switch of the device.
- 11 Disconnect the device from the power socket when the device is not in use.

Cleaning and Maintenance

- 1 Before beginning with repair or cleaning works make sure the device has been disconnected from the power socket and has cooled down.
- 2 Don't use any acid agents and make sure no water ingresses the device,
- 3 To protect yourself from the electric shock, never immerse the device, its cables and the plug in water or other liquids.
- 4 Don't use any kind of pressure water jet for cleaning the device.

Cleaning

- 1 The device should be cleaned regularly.
- 2 Clean the device from the inside and outside with a soft, damp cloth and a mild cleaning agent.
- 3 Clean the placing grids and the housing with a soft, damp cloth and a mild cleaning agent.
- 4 Clean the water bowl regularly. Calcification at the water bowl may be removed with common agents or liquids.
- 5 Only use a soft cloth and make sure you never use any kind of abrasive agents or pads which could scratch the surface.
- 6 After the cleaning procedure, you should use a soft and dry cloth to wipe dry and polish the surface.
- 7 Make sure the device has been cleaned properly before storing it in a dry place.

Maintenance

- 1 Check the mains lead from time to time to ensure it is not damaged in any way. Never use the device if the lead is damaged. If the lead is damaged, it must be replaced by a qualified electrician .
- 2 Only a qualified technician should carry out repairs and maintenance of the device, Do not attempt to repair the device by yourself.

Cautions

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

Major Parameters

Model	Voltage (V/Hz/Ph)	Power (W)	Temperature(°F)	Capacity (cu ft)	Exterior Dimensions(H*D*W) (inch)
CHDS-53	120V/60Hz/1	1250	85-200	5.3	26.7×22.4×27.5
CHDS-71	120V/60Hz/1	1650	85-200	7.1	26.7×22.4×35.4
CHDC-44	120V/60Hz/1	1250	85-200	4.4	26.7×22.8×27.5
CHDC-56	120V/60Hz/1	1650	85-200	5.6	26.7×22.8×35.4

Disposal of the product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



Caution hot surface

Warranty Information

2 YEAR WARRANTY

All claims for parts or labor must be made directly through Atosa. All claims must include: model number of the unit, the serial number, proof of purchase, date of installation, and all pertinent information supporting the alleged defect. ***Failure to comply with warranty policies will result in voiding claims.***

Two Year Parts & Labor Warranty

Atosa warrants all new components, such as the cabinet and all parts, to be free from defects in materials or workmanship. Atosa's obligation under this warranty is limited to a period of two (2) years from the date of original installation or 27 months after shipment date from Atosa, whichever occurs first. All parts covered under this warranty that are defective within two (2) years of original installation or twenty seven (27) months after shipment date from manufacturer, whichever occurs first, are limited to repair or replacement (including labor charges, of defective parts or assemblies). The labor warranty shall include standard straight time labor charges only and reasonable travel time, as determined by Atosa.

What is Not Covered by This Warranty

Atosa's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additional limitations below. This warranty neither assumes nor authorizes any person to assume obligations other than those expressly covered by this warranty.

ROUTINE MAINTENANCE REQUIREMENTS MUST BE FOLLOWED OR WARRANTY IS VOID

Cleaning, Sanitation and Maintenance:

NO CONSEQUENTIAL DAMAGES: ATOSA IS NOT RESPONSIBLE FOR ECONOMIC LOSS; PROFIT LOSS; OR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, INCLUDING WITHOUT LIMITATION, LOSSES, OR DAMAGES ARISING FROM FOOD OR PRODUCT SPOILAGE, REGARDLESS OF WHETHER OR NOT THEY RESULT FROM REFRIGERATION FAILURE.

WARRANTY IS NOT TRANSFERABLE: This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. ANY SUCH ASSIGNMENT OR TRANSFER SHALL VOID THE WARRANTIES HEREIN AND SHALL VOID ALL WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR LABOR COVERAGE FOR COMPONENT FAILURE OR OTHER THE WARRANTY PACKET PROVIDED WITH THE UNIT.

ALTERATION, NEGLIGENCE, ABUSE, MISUSE, ACCIDENT, DAMAGE DURING TRANSIT OR INSTALLATION, FIRE, FOOD, OR ACTS OF GOD:

Atosa is not responsible for the repair or replacement of any parts that are determined to have been subjected after the date of manufacture to alteration, neglect, abuse, misuse, accident, damage during transit or installation, fire, flood, or act of God.

IMPROPER ELECTRICAL CONNECTIONS: Atosa IS NOT RESPONSIBLE FOR THE REPAIR OR REPLACEMENT OF FAILED OR DAMAGED COMPONENTS RESULTING FROM ELECTRICAL POWER FAILURE, THE USE OF EXTENSION CORDS, LOW VOLTAGE, OR VOLTAGE DROPS TO THE UNIT.

THE TWO (2) YEAR PARTS & LABOR WARRANTY AS DESCRIBED ABOVE. THESE WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, INCLUDING IMPLIED WARRANTY AND MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF.

Outside U.S. and Canada: This warranty does not apply to areas outside the continent of the United States. Atosa is not responsible for any warranty claims made on products sold or used in such areas.

***In some cases, a 25% restocking fee may be charged to a buyer for returned items.* Atosa may at any time modify our equipment in order to provide and insure a superior product. Change is sometimes necessary to keep up with today's high standards in our industry. Atosa reserves the final interpretation of all public materials.**

Model Number _____
Serial Number _____
Installation Date _____

R10001000444

version number 20240108

