 


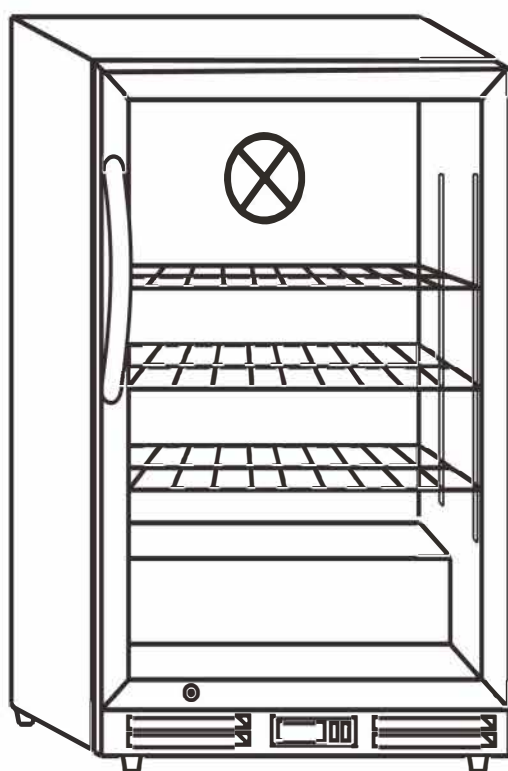

Countertop Merchandiser Owner's Manual

CONTENTS

- SAFETY PRECAUTIONS -----1 ~ 4
- HOW TO USE -----4 ~ 5
- CLEANING -----6
- IN CASE OF THE FOLLOWING -----6 ~ 7
- BEFORE REQUESTING SERVICE -----7
- REQUIRED INFORMATION-----7
- TECHNICAL SPECIFICATIONS -----7
- WARRANTY SERVICE -----8


 


Model:CTD-7T

Please read this instruction completely before operating the units. 13


SAFETY PRECAUTIONS

To ensure proper use, please thoroughly study these **SAFETY PRECAUTIONS** before operating the unit.

- The purpose of the safety precautions in this manual is to ensure safe and correct use of the unit to minimize risks that could cause serious damage and injury to you or other persons. The safety precautions are divided into **WARNINGS** and **CAUTIONS**. Cases where improper handling of the unit could lead to death or serious injury are listed under the “ **WARNING**” heading. However, the cases listed under the “ **CAUTION**” heading could also lead to serious results. To ensure the safety, adhere strictly to both types of safety precautions.
- Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The A-weighted emission sound pressure level is below 70 dB(A).
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The appliance shall be disconnected from its power source during cleaning or maintenance and when replacing parts.
- Storage: During periods of inactivity or before storing, remove all beverages from the appliance, disconnect it from the supply and clean the appliance and its accessories thoroughly. Keep the door(s) of the appliance open, to allow all humidity to escape. Prop the door open with a piece of wood or the like to prevent the door from closing completely. Like this, mold or bad smell can be prevented. Store the appliance in a dry, protected environment, preferably at room temperature. To protect the appliance from dust, cover it with a cloth that allows air circulation inside the appliance. You can also store the appliance in its original packaging. Keep the appliance out of reach of children.
- Regularly check the power plug and power cord for damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Refrigerants must be evacuated and disposed of by a qualified specialist in accordance with federal and local regulations before the appliance is scrapped. **Caution:** Please keep the appliance away from fire or similar glowing substances before you dispose of it. Please remove the door before you dispose of the appliance.
- WARNING: Keep clear of obstruction all ventilation openings in the appliance enclosure or in the structure for building-in.
- WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- WARNING: Do not damage the refrigerant circuit.
- WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- WARNING: The lamp must not be replaced by the user! If the lamp is damaged, contact the customer helpline for assistance.
- WARNING: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- WARNING: In order to reduce flammability hazards the installation of this appliance must only be carried out by a suitably qualified person.

 **WARNING** Improper handling of the unit could lead to death or serious injury.

 **CAUTION** Improper handling of the unit could lead to serious results depending on the circumstances.

- Text set off by the exclamation mark  contains information that should be strictly adhered to.
- After reading the instruction manual, store it in an easily accessible place where the user(s) of this product can easily find it.

SAFETY PRECAUTIONS



The symbol is a warning and indicates the refrigerant and insulation blowing gas are flammable.

Warning: Risk of fire / flammable materials.

Warning - Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Warning - When positioning the appliance, ensure the supply cord is not trapped or damaged.

Warning - Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.

Warning - The refrigerant and insulation blowing gas are flammable. When disposing of the appliance do so only at an authorized waste disposal centre. Do not expose to flame.

◆ PRECAUTIONS FOR INSTALLATION



WARNING



Installation should be performed only by the dealer or a qualified expert. Attempting to install the unit yourself could result in water leakage, refrigerant leakage, electrical shock, or fire.

◆ PRECAUTIONS FOR USE

 


WARNING




DON'T TAMPER

All repairs, disassembly and modifications should be performed only by qualified technicians. Attempting to perform these yourself could result in a fire, malfunction, and injury.

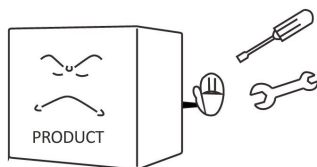


ELECTRICAL SHOCK HAZARDS

 Never splash water directly onto the product or wash with water as short-circuit and electrical leakage could result.

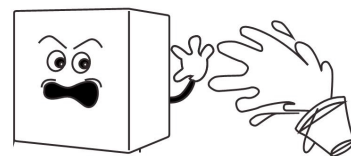


DANGER OF EXPLOSION

 Never put flammable or volatile substances into the unit as explosion and fire could result.

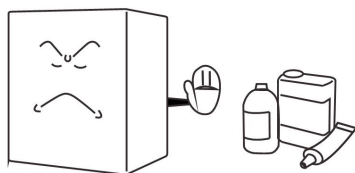


PROHIBITED

 Do not damage, modify, excessively bend, strain, twist or bundle up the power cord. Also, placing heavy objects the power cord or squeezing it in a tight place could damage it, possible resulting in electrical shock or fire.

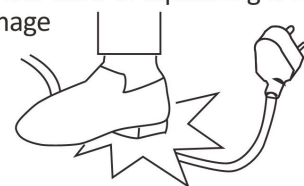


PROHIBITED

 Use a dedicated wall outlet. Do not use extension cords or convenience receptacles as this could result in electrical shock, overheating and a fire.

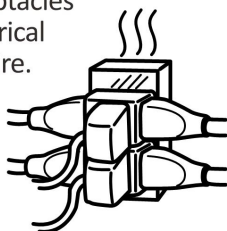

FLAMMABLE

 Never use flammable spray cans or leave flammable substances near the unit. Sparks from electrical switches could result in explosion and fire.

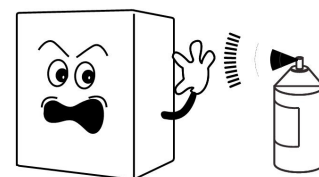

SAFETY PRECAUTIONS

 
◆ PRECAUTIONS FOR USE




WARNING



The cooler is intended for storage and display of beverages for sale. Do not use for other purpose than intended as this could adversely affect items placed in the unit.

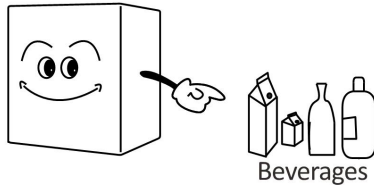


 Never attempt to insert fingers, sticks, etc. Into the cold air suction outlet as a circulation fan is rotating at high speed inside the outlet. Injury, electrical shock and improper operation could result.

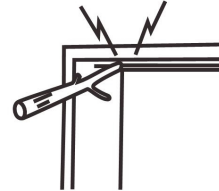


PROHIBITED

 For indoor use only. Using the unit in a location exposed to rain could result in electrical leakage and electrical shock.

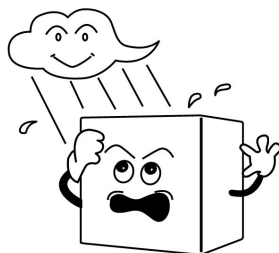


PROHIBITED

 Never place heavy objects or items containing water on top of the unit. Objects could fall down and cause injury and spilled water could deteriorate the insulation of electrical components and result in electrical leakage.

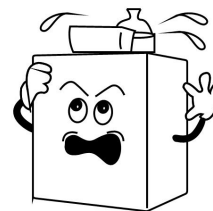


 Install the unit in a location where the floor is sturdy enough to support the load of the unit. If the floor is not sturdy enough or installation is incorrectly performed, the unit could tip over and falling shelves and products could cause personal injury.

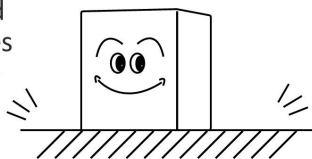

CAUTION AGAINST EXPLOSION

 
If you find gas leakage, please don't touch the appliance. Turn it off and open the doors and windows for ventilation. Gas leakage could cause explosion, fire, and fire injury.

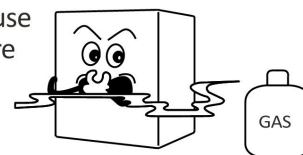


Store the unit in a location where it is not exposed to rain. Using a unit that has been exposed to rain could result in electrical leakage and electrical shock.



 Keep away from hot air sources cooling performance is reduced if the unit is placed near heat sources such as hot plates and stoves and if it is exposed to direct sunlight.

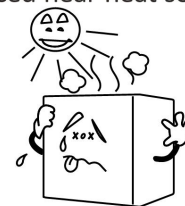

 
Leave disassembly and disposal of the unit to qualified experts.

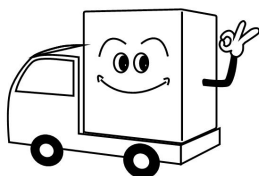

Should the unit need temporary storage make sure not to store the unit in a location where children play and take precautions so that the door cannot be completely closed. This will minimize the risk that a child becomes trapped inside the compartment.


WELL VENTILATED PLACE

 Please make sure there is more than 4in. space between UPRIGHT COOLER and the wall. If there is no space, cooling capacity can drop down.

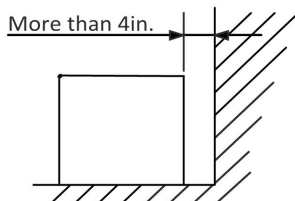

DANGER OF ELECTRICAL SHOCK

 If installation in a damp location is unavoidable, also install an electrical circuit breaker. If no electrical circuit breaker is installed, electrical shock could result.

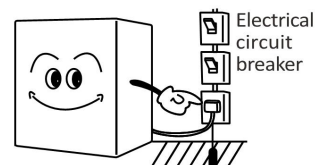

SAFETY PRECAUTIONS

◆ PRECAUTIONS FOR USE

 


WARNING




PROHIBITED

Never hang from the door or climb onto the unit. The unit could tip over or fall and cause material damage or injury.

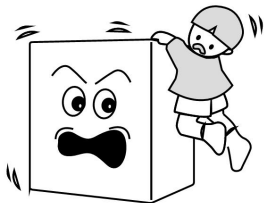


DISCONNECT
POWER CORD
PLUG FROM
WALL OUTLET

 Disconnect the power cord plug from the wall outlet before moving the unit and make sure that the power cord is not damaged during transport. A damaged power cord could result in electrical shock and/or fire.

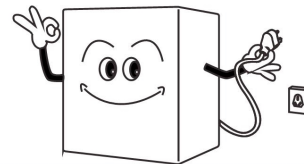


DON'T PINCH
FINGERS

 Grasp the handle when closing the door. Holding at other positions could result in pinched fingers and injury.

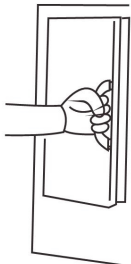


DO NOT TOUCH

 
Do not push hand against or apply excessive force to glass surfaces as the glass could break and cause injury.

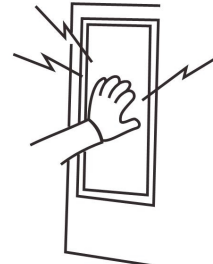

 When disconnecting the power cord plug from the wall outlet, hold at the plug main body close to the outlet. Pulling the cord could cause wire breakage, possibly resulting in overheating and fire.

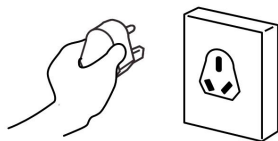

 Make sure that the unit does not tip over or fall when it is moved. A falling unit could cause serious injury.

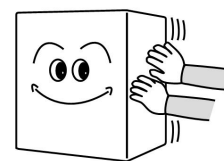


PROHIBITED

Do not throw items onto the shelves and do not place items totaling more than 55 lb on each shelf. The shelf could fall down, possibly causing injury.



 Be sure to attach and secure shelves correctly. An improperly attached shelf could fall down and cause injury.

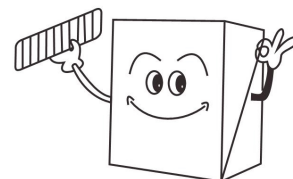

HOW TO USE

BEFORE USE

- Remove shipping package, tape, etc, and leave doors open. Ventilate for a while.
- The unit is cleaned before shipment. However, clean the compartment interior after delivery.
- Please insert power supply, plug into the wall outlet, single-phase to correct voltage.
- Allow the unit to operate for about 1 hour to cool the compartment before placing items in the cooler.

WAIT 5 MINUTES OR MORE BEFORE RE-STARTING

- Restarting the unit immediately after it has been turned off may cause fuses to blow and activate the circuit-breaker, the compressor may be overloaded, and/or other damage may occur.



HOW TO USE

TEMPERATURE ADJUSTMENT




The electronic controller has been factory set to cool the beverages to low temperature, approximately 34-41 °F. Should you wish to alter the temperature set point, please use the following procedure.

Change the Set Point

While the display is showing the inside temperature, hold **Set** for three seconds to enter the user menu, it should display the code **St**, then press **Set** again to display the value of **St**. It can be modified by pressing the  or  keys to set the temperature, and then press **Set** key to save and return to **St**.

Manual Defrost

While the display is showing the inside temperature, hold  for three seconds to force the unit to enter defrost.

DRAIN TRAY

- Defrosting is performed automatically and drain water is collected in the drain tray.
- Water in the drain tray is evaporated automatically. In humid environments, there will be a large amount of water in the drain tray, so please throw away drain water once a day.

EFFICIENT USE

- To prevent cold air from escaping, open and close the door quickly and keep the door opened for as short a time as possible.
- Please install the unit in a place which is well-ventilated.

SHELF HEIGHT ADJUSTMENT

- The shelf height can be adjusted.
- Arrange the shelves in accordance with the dimensions of the items to be placed in the cooler.

PLACING ITEMS IN THE SHOWCASE

This showcase employs a forced circulation of cold air system. If circulation of cold air is obstructed, the items will not be adequately refrigerated. Pay attention to the following points:

- Do not let items obstruct the cold air inlet and suction outlet.
- Place items so that they do not protrude from the shelves. The gap between the shelves and the door is used for circulation of cold air.
- Place items evenly on all shelves.
- Commercial refrigeration display cooler.
- This equipment is intended for the storage and display of non-potentially-hazardous bottled or canned products only.

AMBIENT OPERATING LIMIT

- This unit is intended for use in a temperature-controlled environment of less than 75°F and 55% relative humidity.

CLEANING



To prevent any electrical shock hazards or injury by rotating circulation fan, always disconnect the power cord plug from the wall outlet before cleaning.

 
1 EXTERIOR AND COOLER COMPARTMENT

Wipe with a soft, dry cloth. If very soiled, wipe with a cloth that has been moistened with a detergent. Then wipe with a cloth that has been dipped in water.



Do not splash water directly onto the cooler and do not wash with water. Short-circuit and electrical shock could result.

- Clean the cooler regularly to keep it clean at all times.
- Never use polishing powder, soap powder, benzine, oil or hot water as there will damage the painting and plastic components.

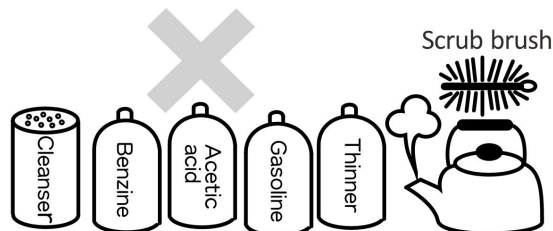

2 CHECKS

To ensure the safety, perform the following checks after cleaning.

- Is the power cord plug firmly inserted into a dedicated wall outlet? Confirm that the plug is not abnormally hot.
- Check the power cord for cracks and damage. Should the slightest irregularity be observed, contact the dealer from whom you purchased this unit or our customer's service.

IN CASE OF THE FOLLOWING

1 POWER FAILURE

Keep opening and closing of the door to a minimum.

Avoid placing new items in the cooler as this will raise the temperature inside the compartment.

2 WHEN NOT USED FOR A LONG PERIOD

Remove all items from the compartment and disconnect the power cord plug from the wall outlet. Clean the compartment interior and wipe away all water.

To prevent mold formation and bad smell, leave the door open to dry the compartment completely.

3 TRANSPORTATION

Disconnect the power cord plug from the wall outlet.

When moving the cooler, make sure that the feet do not damage the power cord.

Do not let the feet hit against floor steps, thresholds, etc.

4 TEMPORARY STORAGE

Affix a piece of wood, etc. Between the door and main unit to prevent complete closing of the door. Make sure not to store the unused cooler at a location where children play.

Should a child enter the compartment and the door is closed, the child may not be able to open the door from the inside.

BEFORE REQUESTING SERVICE

Please check the following items if you encounter problems with the unit. If the problem continues after taking the proper remedial actions, disconnect the power cord plug from the wall outlet. Transfer the items stored in the cooler to a box or other container. Then contact the dealer from whom you purchased this unit and be ready to provide information as listed in “REQUIRED INFORMATION” below.



To prevent any electrical shock hazards, do not disconnect the power cord plug from the wall outlet with wet hands.

No refrigeration at all	<ul style="list-style-type: none"> • Is the power supply interrupted? • Is the power cord plug disconnected from the wall outlet? • Are the shop’s power fuses blown and/or the circuit breaker activated?
Inadequate refrigeration	<ul style="list-style-type: none"> • Is the temperature setting appropriate? • Are items obstructing the cold air inlet and suction outlet? • Are stored items packed too tight? • Is the door open or is it opened and closed frequently? • Is the condenser clogged?
Excessive noise	<ul style="list-style-type: none"> • Are all feet in firm contact with the floor? • Is the rear panel of the cooler contacting the wall or other objects? • Are other objects in contact with the cooler?
Condensation on cooler exterior	<ul style="list-style-type: none"> • Condensation may condense on the exterior and door during hot and humid days or depending on the place of installation. This occurs when the humidity is high and water particles in the air contact cold surfaces. This is normal. Wipe away condensation with a dry cloth.

Showcase sometimes stop running when thermostat turns off.

REQUIRED INFORMATION

- ① Nature of malfunction
(as accurately as possible)

② Product number

③ Serial number

On rating label

On carton
- ④ Customer’s name, address, phone number

⑤ Year and date of purchase



Electric appliances are recyclable and should not be discarded in the domestic waste! Please actively support us in conserving resources and protecting the environment by returning this appliance to the collection centers.

TECHNICAL SPECIFICATIONS

Model	Voltage	Watts/Amps	Refrigerant	Net Weight	Dimensions (H x W x D) Inches
CTD-7T	115V~/60HZ	143W/1.3A	R600a(1.28oz)	101 lbs	38" x 21 1/2" x 24"



CONFORMS TO UL STD.471
 CERTIFIED TO CSA STD. C22.2
 NO.120
 Conforms to NSF/ANSI STD. 7



WARRANTY SERVICE



At Atosa USA, Inc., we are incredibly proud to have our very own in-house service department, Smart Kitchen Service. At Smart Kitchen Service, our staff is dedicated to providing our customers with service and support exceeding their expectations. Each one of our service agents has been individually trained to make sure we provide you with the ultimate customer service experience. We pride ourselves on delivering superior customer service by providing a steady communication between our service agents and our customers. Smart Kitchen Service has a network of over 500 technicians across the United States ready to serve you and our unique ability to provide customers with same day customer's service gives us an edge over our competition. In our service department, every customer is assigned to a dedicated customer service representative who directly oversees their service call and its progress from start to finish. The direct involvement of our customer service team allows Smart Kitchen Service to remain flexible and tailor our service to suit the needs of our customers. When you need a solution, our customer service representatives are there to help you find it. We make your satisfaction and continued business our priority!

For warranty or technical support, please contact our Smart Kitchen Service team at one of the options listed below.

 
We Make the First Call, the Right Call!

Toll Free: 1 (800) 683-8660

For Warranty Information: Warranty@AtosaUSA.com

For Parts Information: Parts@AtosaUSA.com

CTD-7T Exploded View

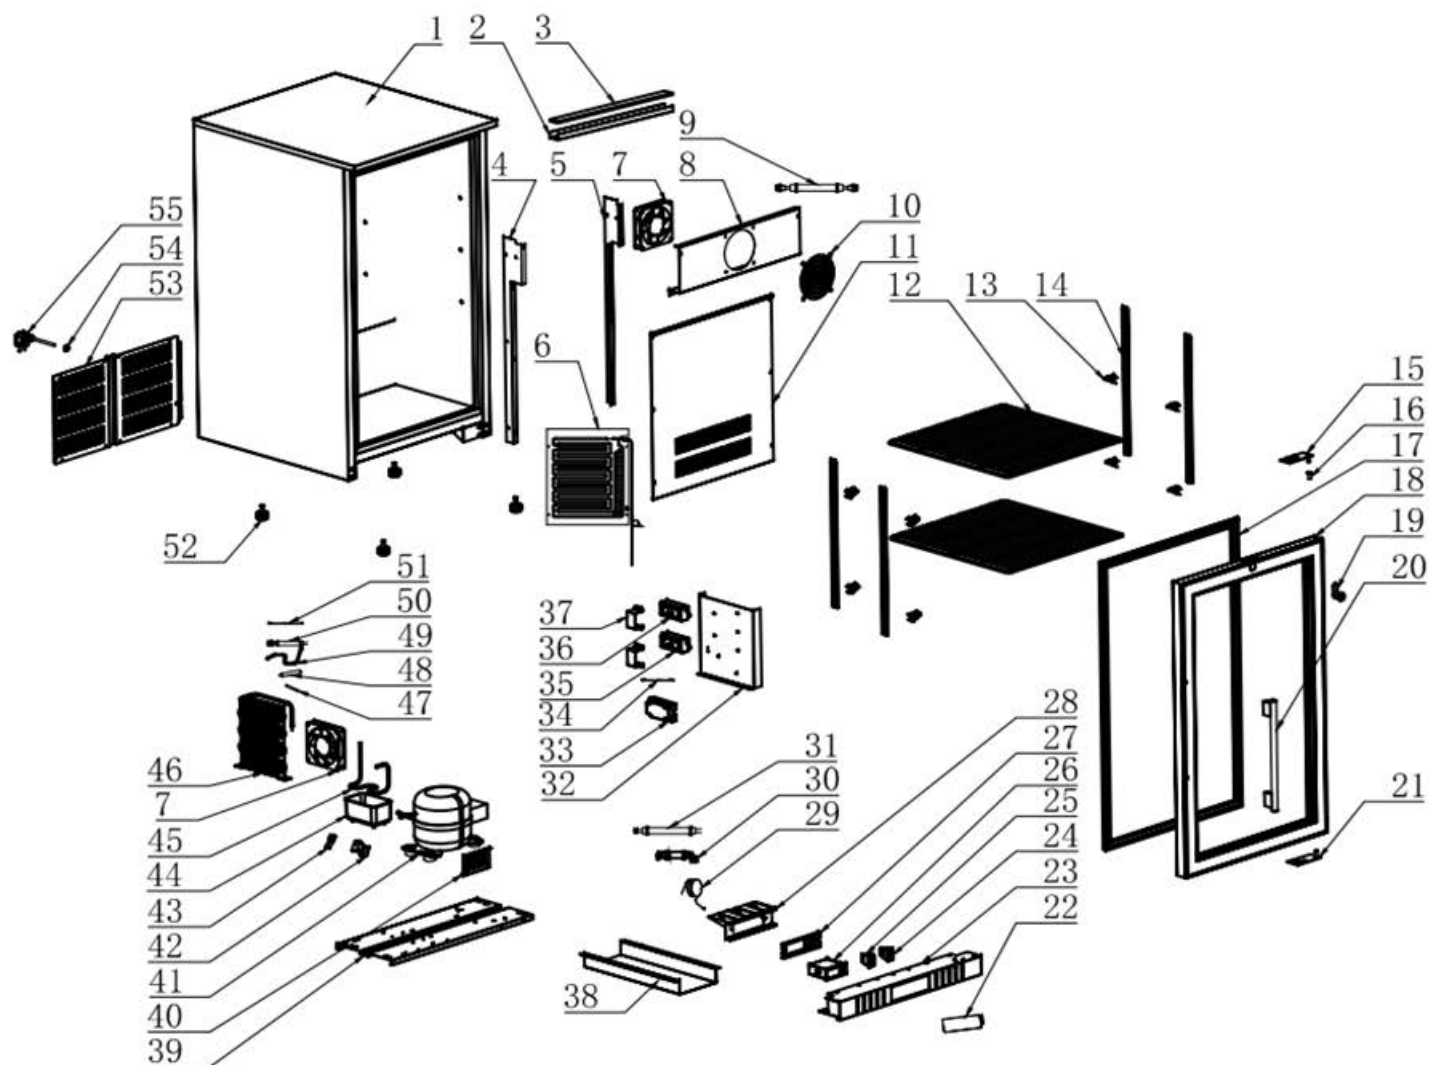

CTD-7T Part List

No.	Part #	Part name	Qt'y	No.	Part #	Part name	Qt'y
1	CTD7T001	Cabinet Assembly	1	29	CTD7T029	Temperature Probe	1
2	CTD7T002	Light Cover	1	30	CTD7T030	Controller Wires	1
3	CTD7T003	Led Light	1	31	CTD7T031	Power Supply Wires	1
4	CTD7T004	Left Bracket Of Air Deflector	1	32	CTD7T032	Electrical Box Metal Board	1
5	CTD7T005	Right Bracket Of Air Deflector	1	33	CTD7T033	Cable Box	1
6	CTD7T006	Evaporator	1	34	CTD7T034	Ground Wire	1
7	CTD7T007	Fan Motor	2	35	CTD7T035	Power Supply 1	1
8	CTD7T008	Fan Board	1	36	CTD7T036	Power Supply 2	1
9	CTD7T009	Connecting Wire Of Fan Motor	1	37	CTD7T037	Power Supply Bracket	2
10	CTD7T010	Evaporator Fan Cover	1	38	CTD7T038	Wire Groove	1
11	CTD7T011	Air Deflector	1	39	CTD7T039	Condensing Base Plate	1
12	CTD7T012	Shelf	3	40	CTD7T040	Bottom cover	1
13	CTD7T013	K-Clips	12	41	CTD7T041	Compressor	1
14	CTD7T014	Shelf Support	4	42	CTD7T042	Drier	1
15	CTD7T015	Upper Door Hinge	1	43	CTD7T043	Clip For Drier	1
16	CTD7T016	Door Axle Sleeve	2	44	CTD7T044	Water Tray	1
17	CTD7T017	Door Gasket	1	45	CTD7T045	Discharge Line Loop Tube	1
18	CTD7T018	Glass Door	1	46	CTD7T046	Condenser	1
19	CTD7T019	Lock And Key	1	47	CTD7T047	Compressor Tube	1
20	CTD7T020	Door Handle	1	48	CTD7T048	Drier	1
21	CTD7T021	Lower Door Hinge	1	49	CTD7T049	Suction Tube	1
22	CTD7T022	Controller Cover	1	50	CTD7T050	Compressor Connecting wire	1
23	CTD7T023	Front Grill	1	51	CTD7T051	Compressor Ground (wire)	1
24	CTD7T024	Power Switch(Red)	1	52	CTD7T052	Adjustable Feet	4
25	CTD7T025	Light Switch(Green)	1	53	CTD7T053	Back Cover	1
26	CTD7T026	Digital Controller	1	54	CTD7T054	Φ10 Washer	2
27	CTD7T027	Install Board Of Digital Controller	1	55	CTD7T055	Power Cord/Plug	1
28	CTD7T028	Install Board C Of Digital Controller	1				

Dear Customer,

We want to thank you for choosing to purchase our equipment. We hope this is just the beginning of a fruitful and long-lasting partnership. This manual contains all the necessary information for the proper use and maintenance of the equipment. Therefore, we recommend that you read it carefully before using the appliance and hang on to it for future reference.

Congratulations on the purchase of your new glass door cooler!

-Atosa USA

This image shows a blank sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



Address: 201 N Berry St., Brea, CA 92821

Phone: (909)-595-2688

Email: Info@AtosaUSA.com

Website: www.atosausa.com